REVISIONS		
No.	DESCRIPTION	DATE / SIGN
第4版	英文併記	17. 3. 6
⚠	対応センサ追記（P2）	17. 6.15

センサーの接続については、2ページを参照下さい。
Please refer to page 2 for the connection of the sensor.

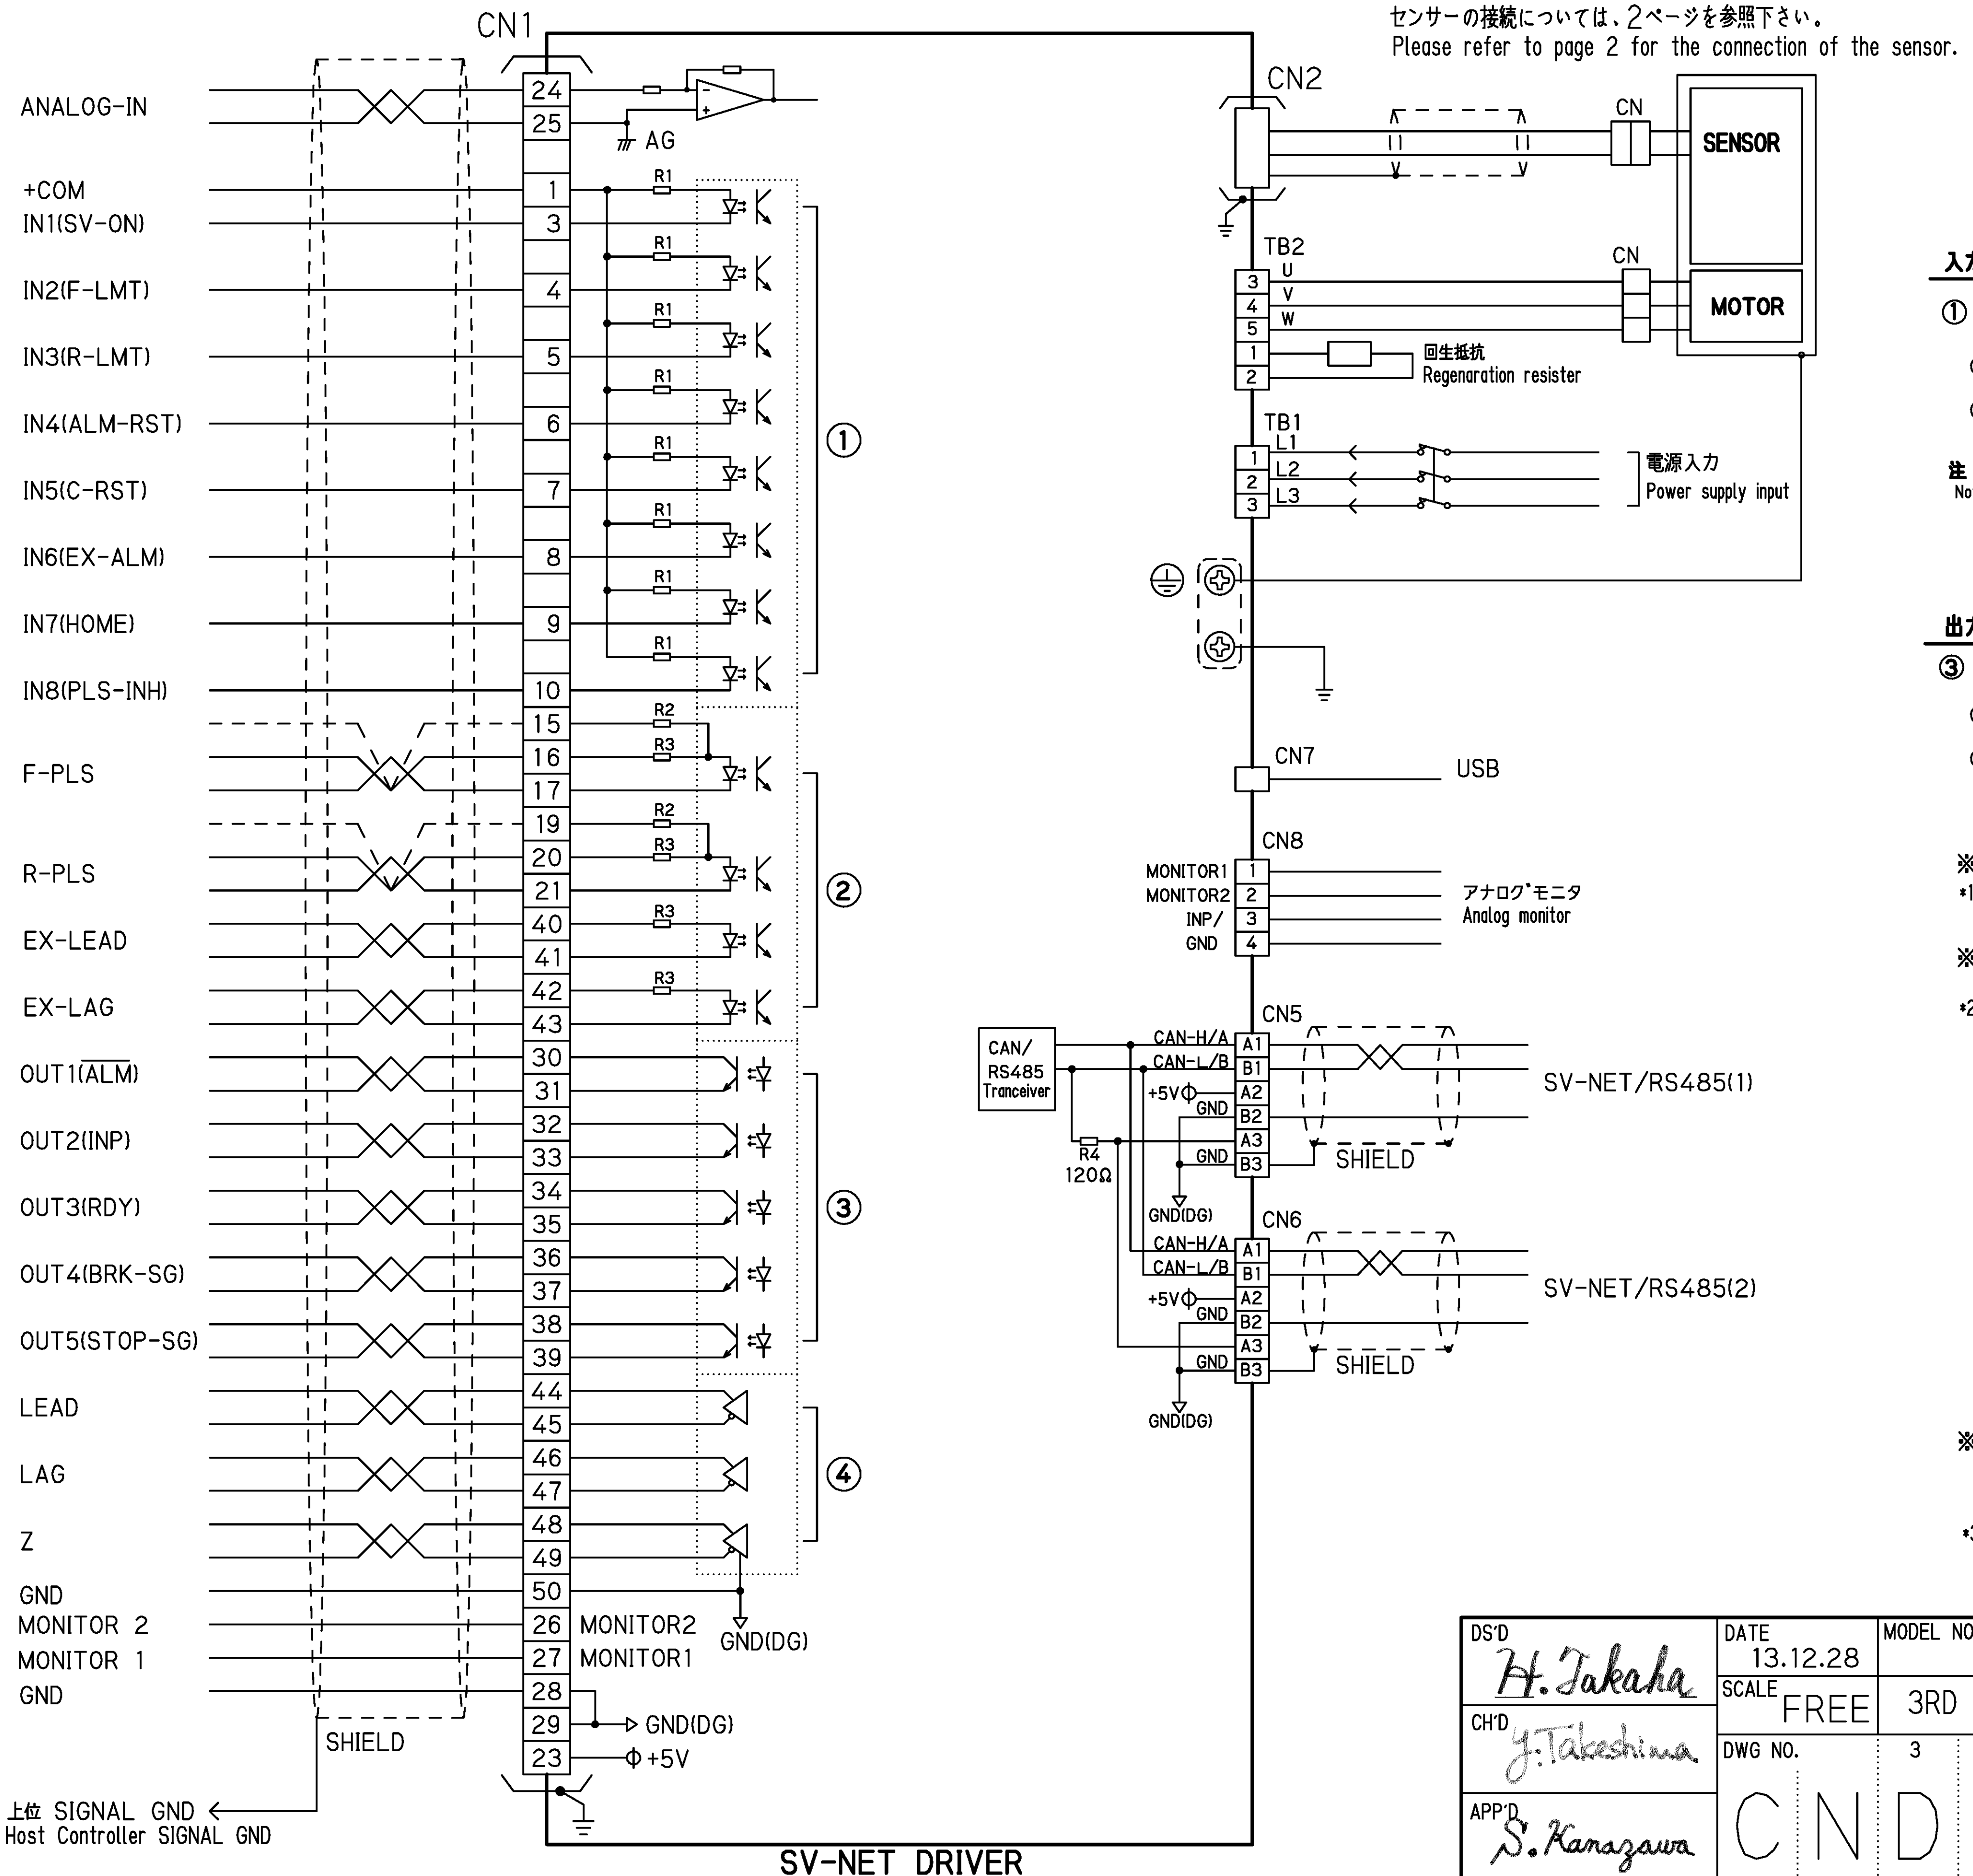

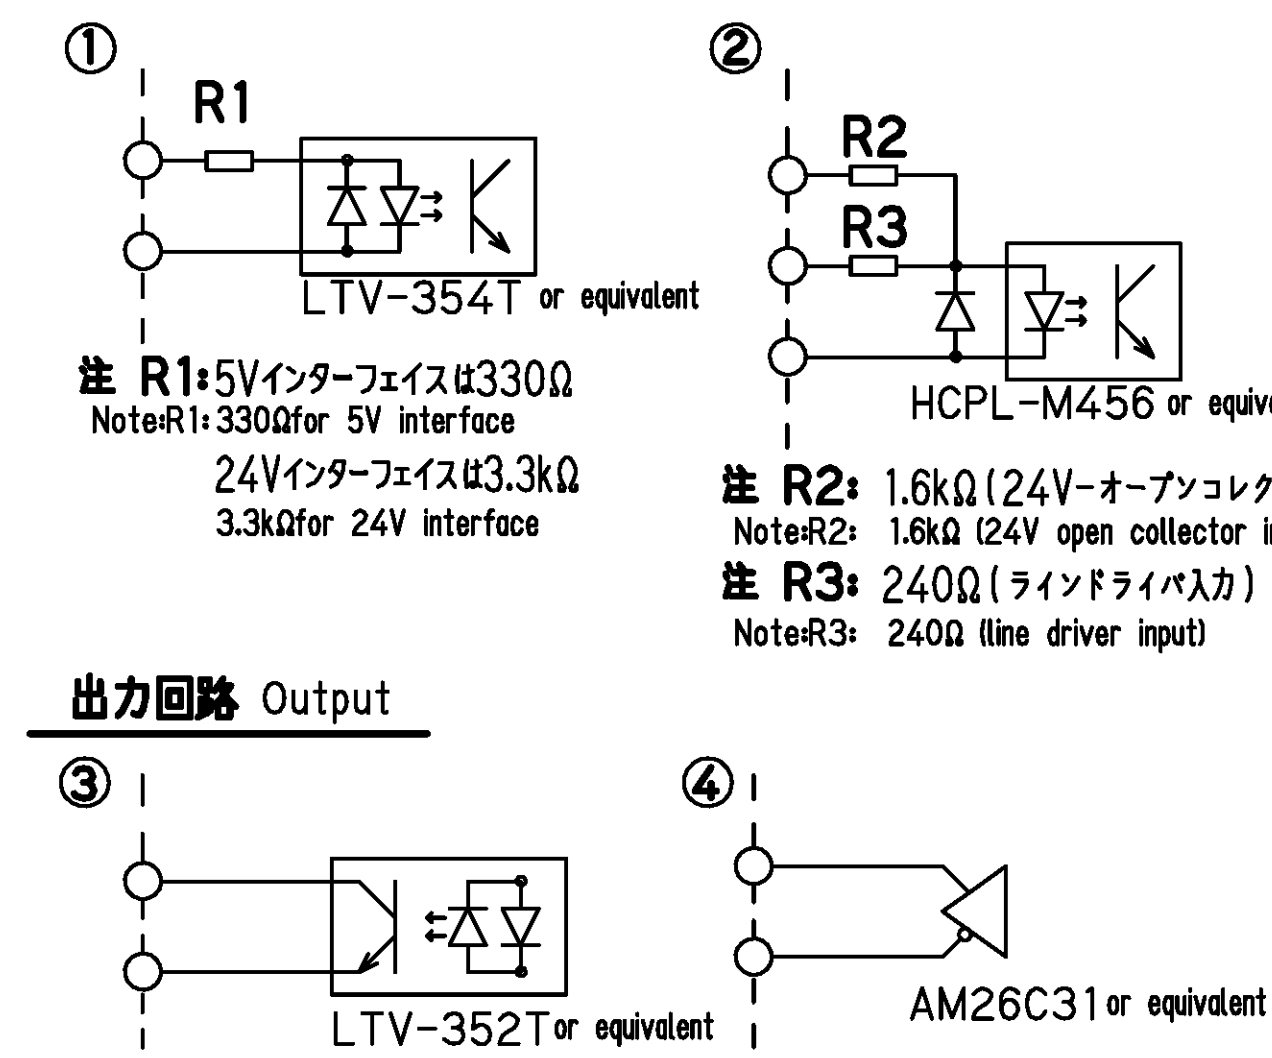

注 R1：5Vインターフェイスは330Ω
Note:R1: 330Ω for 5V interface
24Vインターフェイスは3.3kΩ
3.3kΩ for 24V interface

注 R2：1.6kΩ（24Vーオープンコレクタ入力）
Note:R2: 1.6kΩ (24V open collector input)
注 R3：240Ω（ラインドライバ入力）
Note:R3: 240Ω (line driver input)

※1 電源は、単相,及び3相何れも接続可能です。
*1 The power supply can be connected to either single-phase or three-phase.

※2 電源電圧とI/F電圧はN番形式により異なります。
組み合わせは下記のとおり
*2 The power supply voltage and the I/F voltage differ by N-number model.
Combinations are as follows.

TAD8811N□***

- 定格電流指定 詳細は各仕様書をご覧下さい。 Rated current specification. refer to each specification for details.
- 電源電圧、I/F電圧 Electrical supply voltage、I/F voltage
  - 1 : I/F電圧 5V 電源電圧 AC100V
    1 : I/F voltage 5V Electrical supply voltage AC100V
  - 2 : I/F電圧 5V 電源電圧 AC200V
    2 : I/F voltage 5V Electrical supply voltage AC200V
  - 3 : I/F電圧 24V 電源電圧 AC100V
    3 : I/F voltage 24V Electrical supply voltage AC100V
  - 4 : I/F電圧 24V 電源電圧 AC200V
    4 : I/F voltage 24V Electrical supply voltage AC200V
- 特殊機械仕様:通常表記なし Special machinery specification

※3 センサーSHIELDはDGへの接続を推奨します。但し、CN2-CASE(⏚)に接続した方が、ノイズ耐量が上がる場合もあります。
*3 We recommend that the sensor shild be connected to DG.
Howevew,connecting to CN2-CASE(⏚)can increase the noise resistance level.

DS'D	DATE	MODEL NO.	TITLE
H.Takaha	13.12.28	TAD8811	外部接続図
	SCALE FREE	3RD ANGLE PROJECTION	
CH'D Y.Takeshima	DWG NO.	CND00261W00	SHEET 1/2
APP'D S.Kanazawa			

TAMAGAWA SEIKI CO.,LTD.

Sensor Connection Diagram

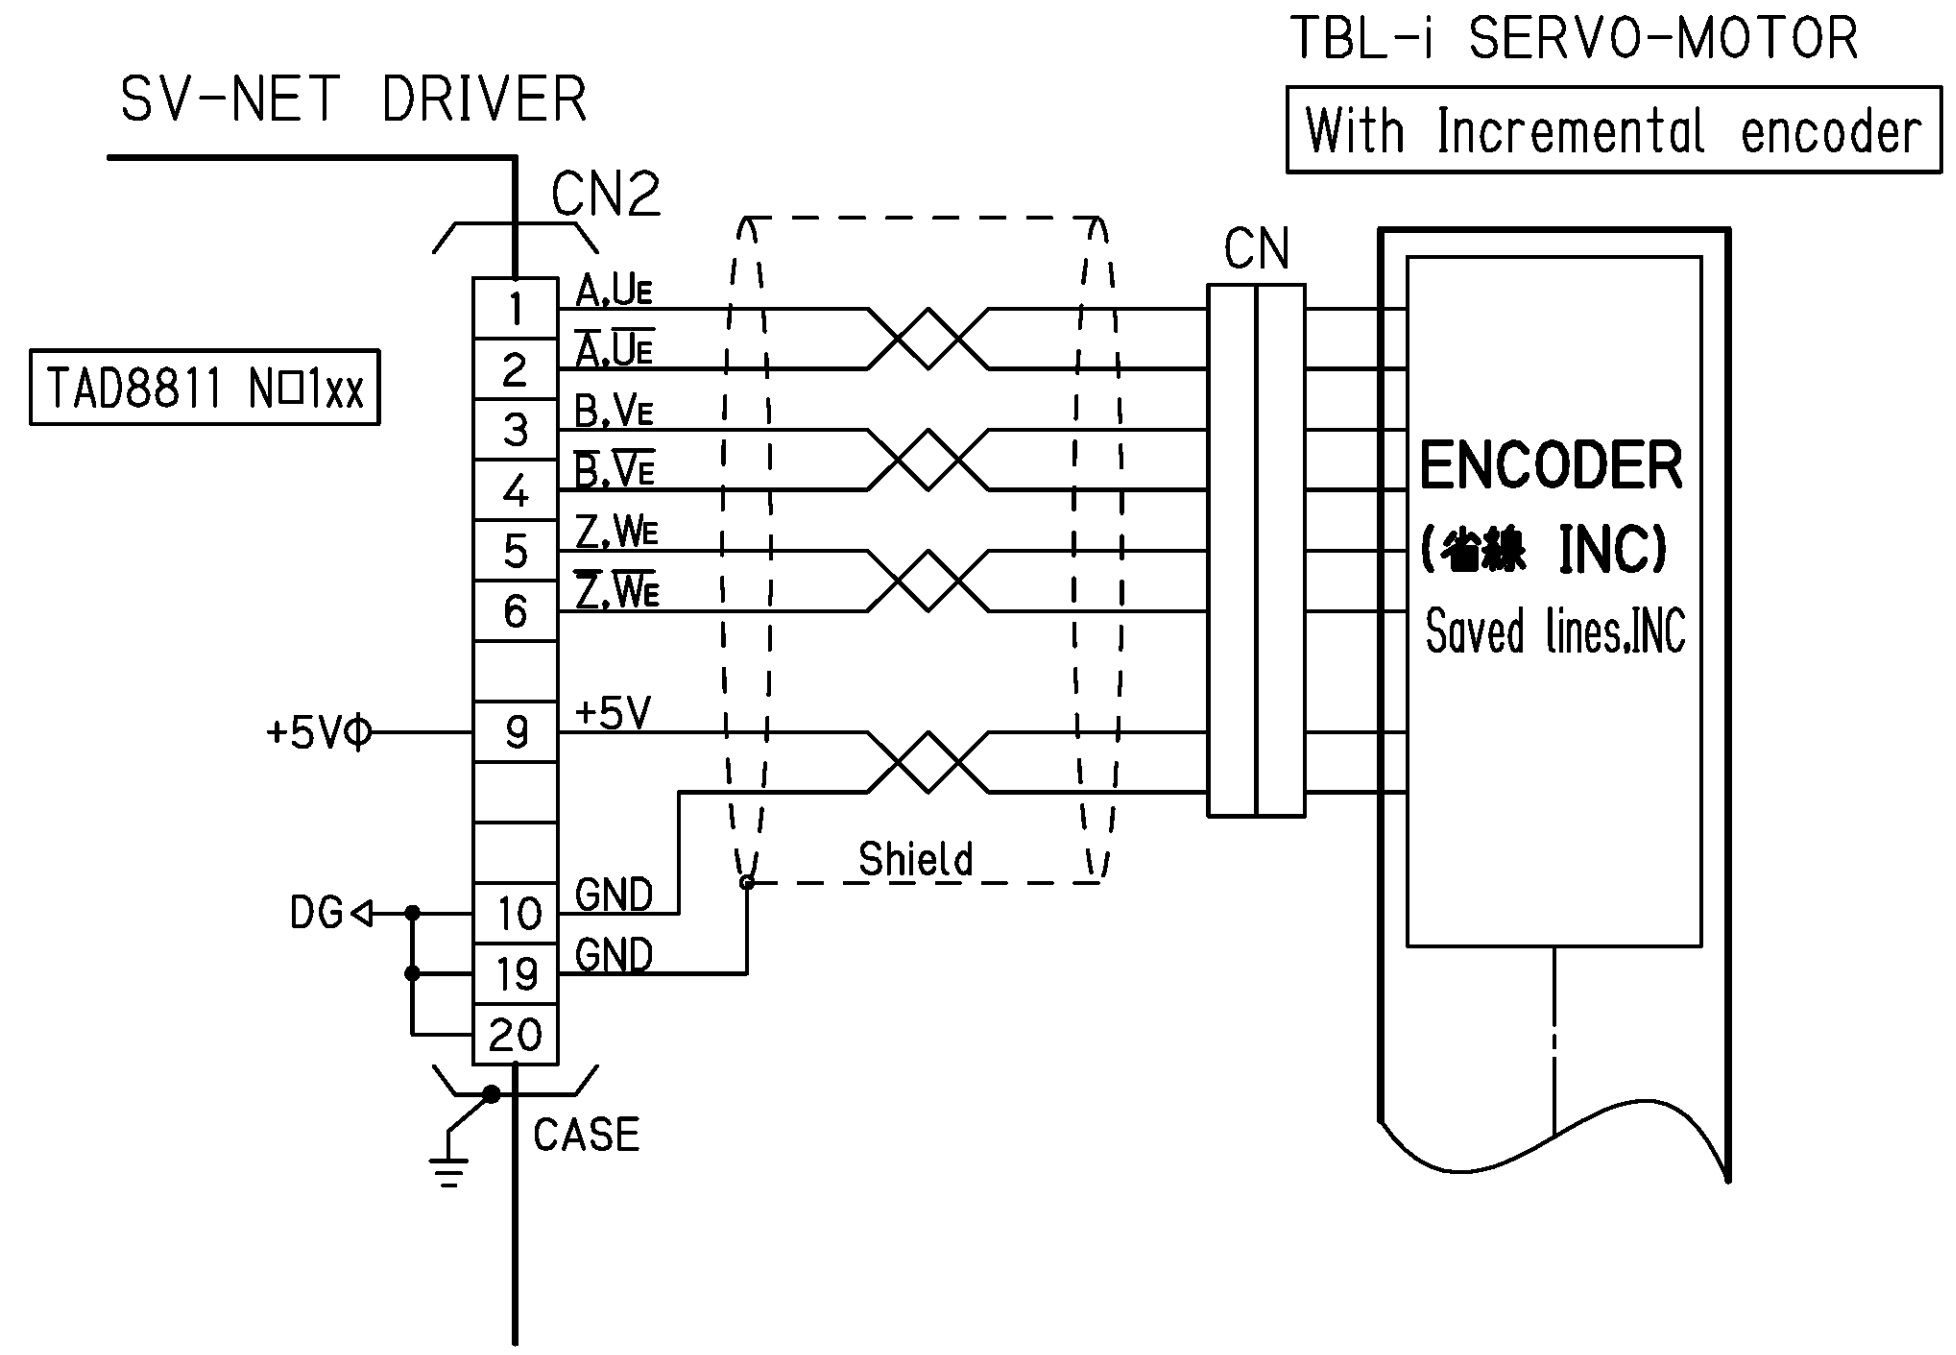

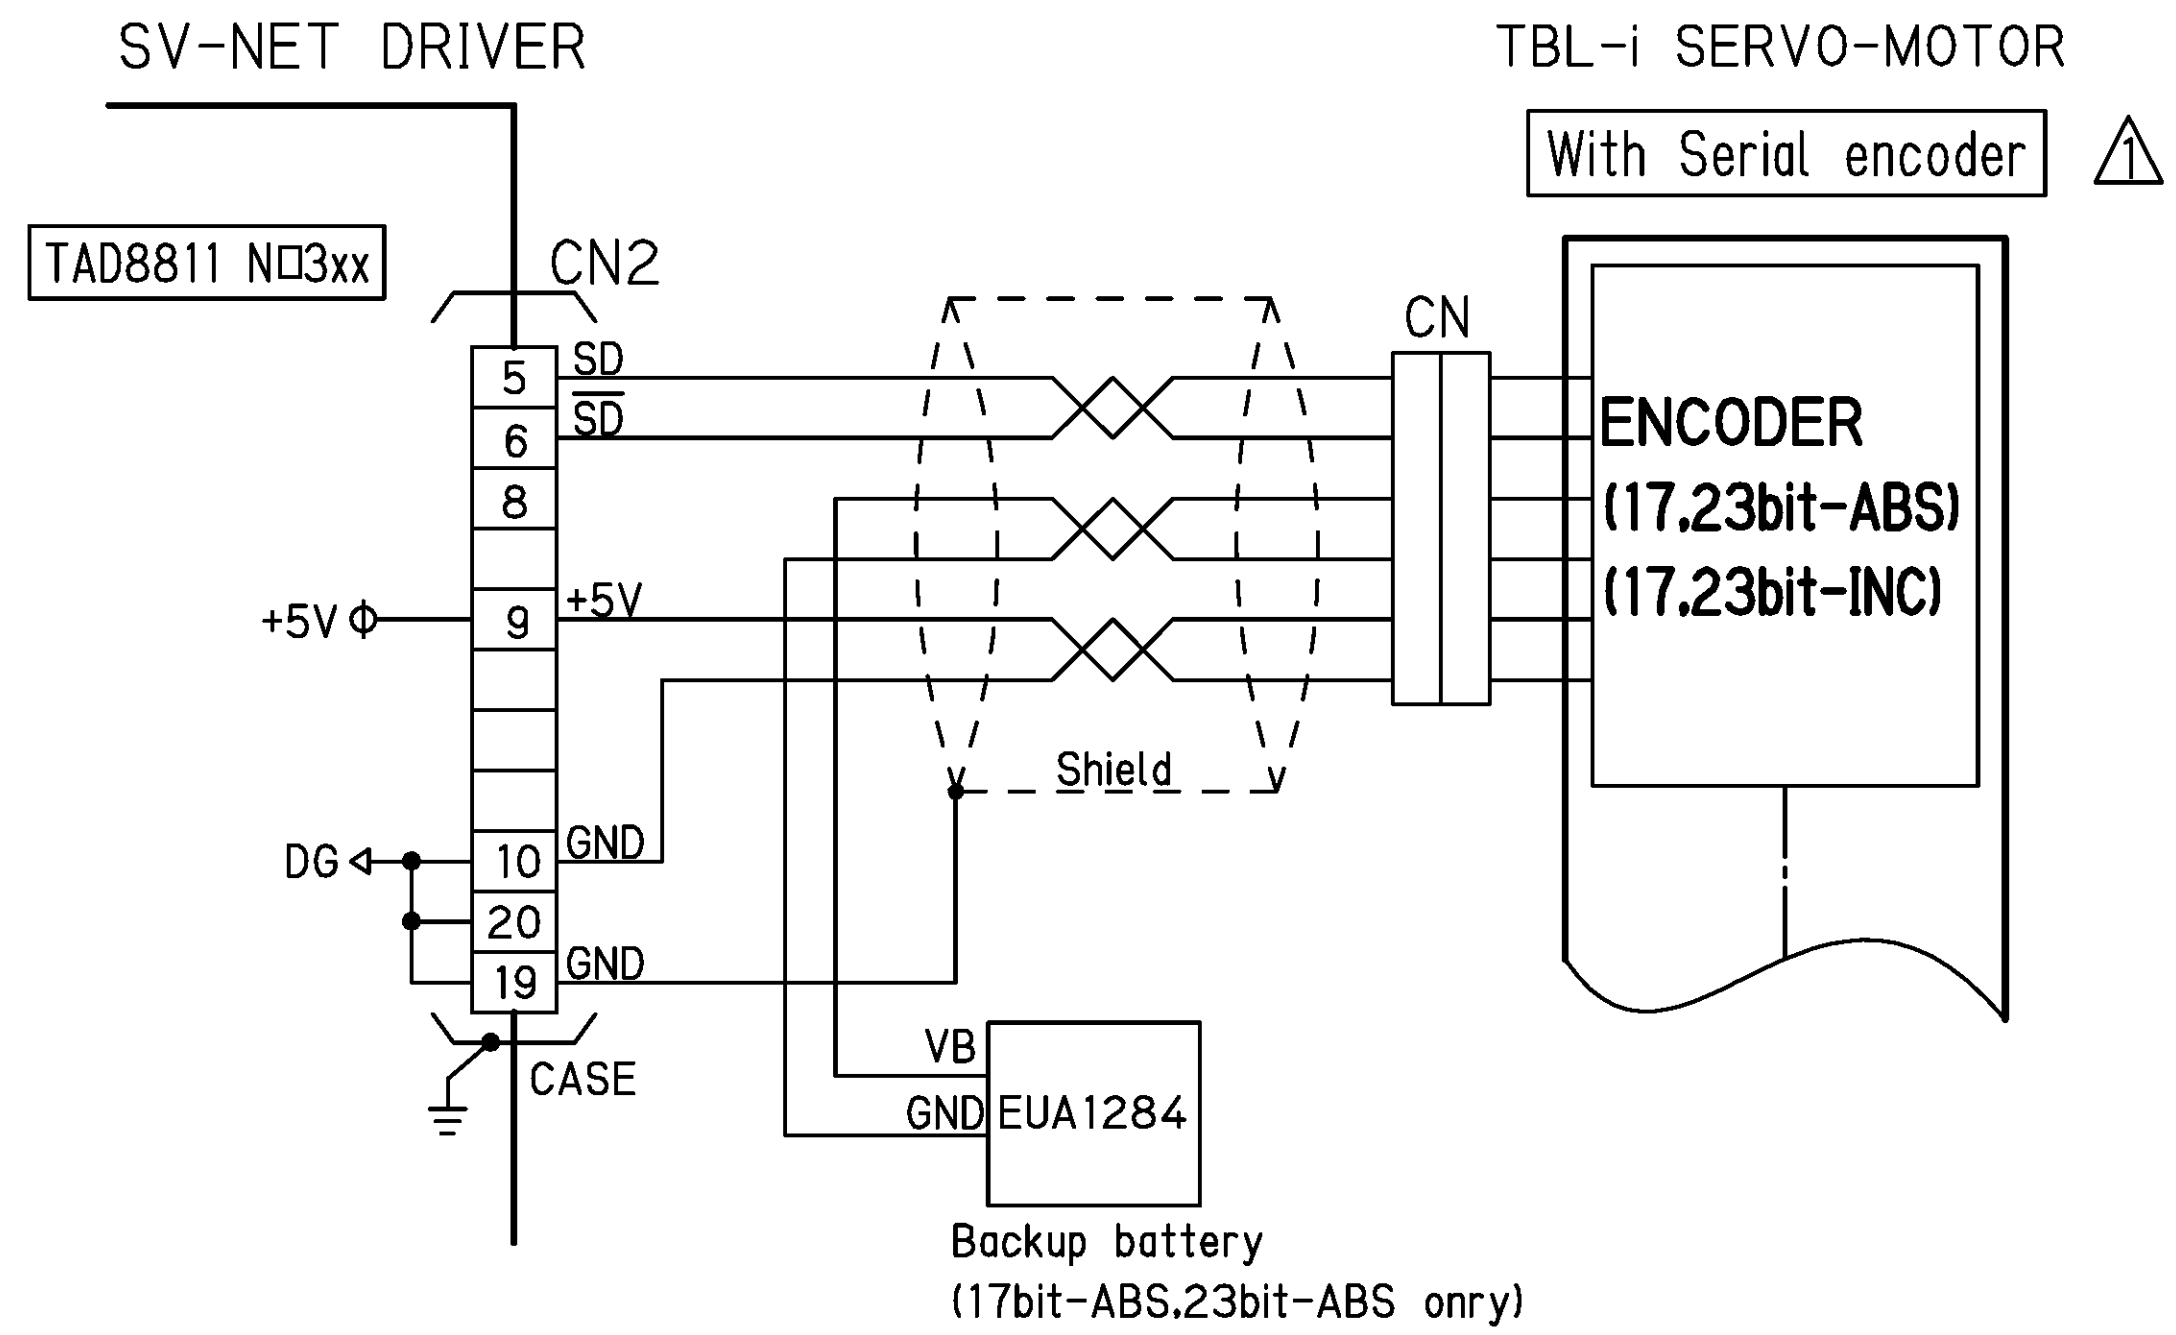

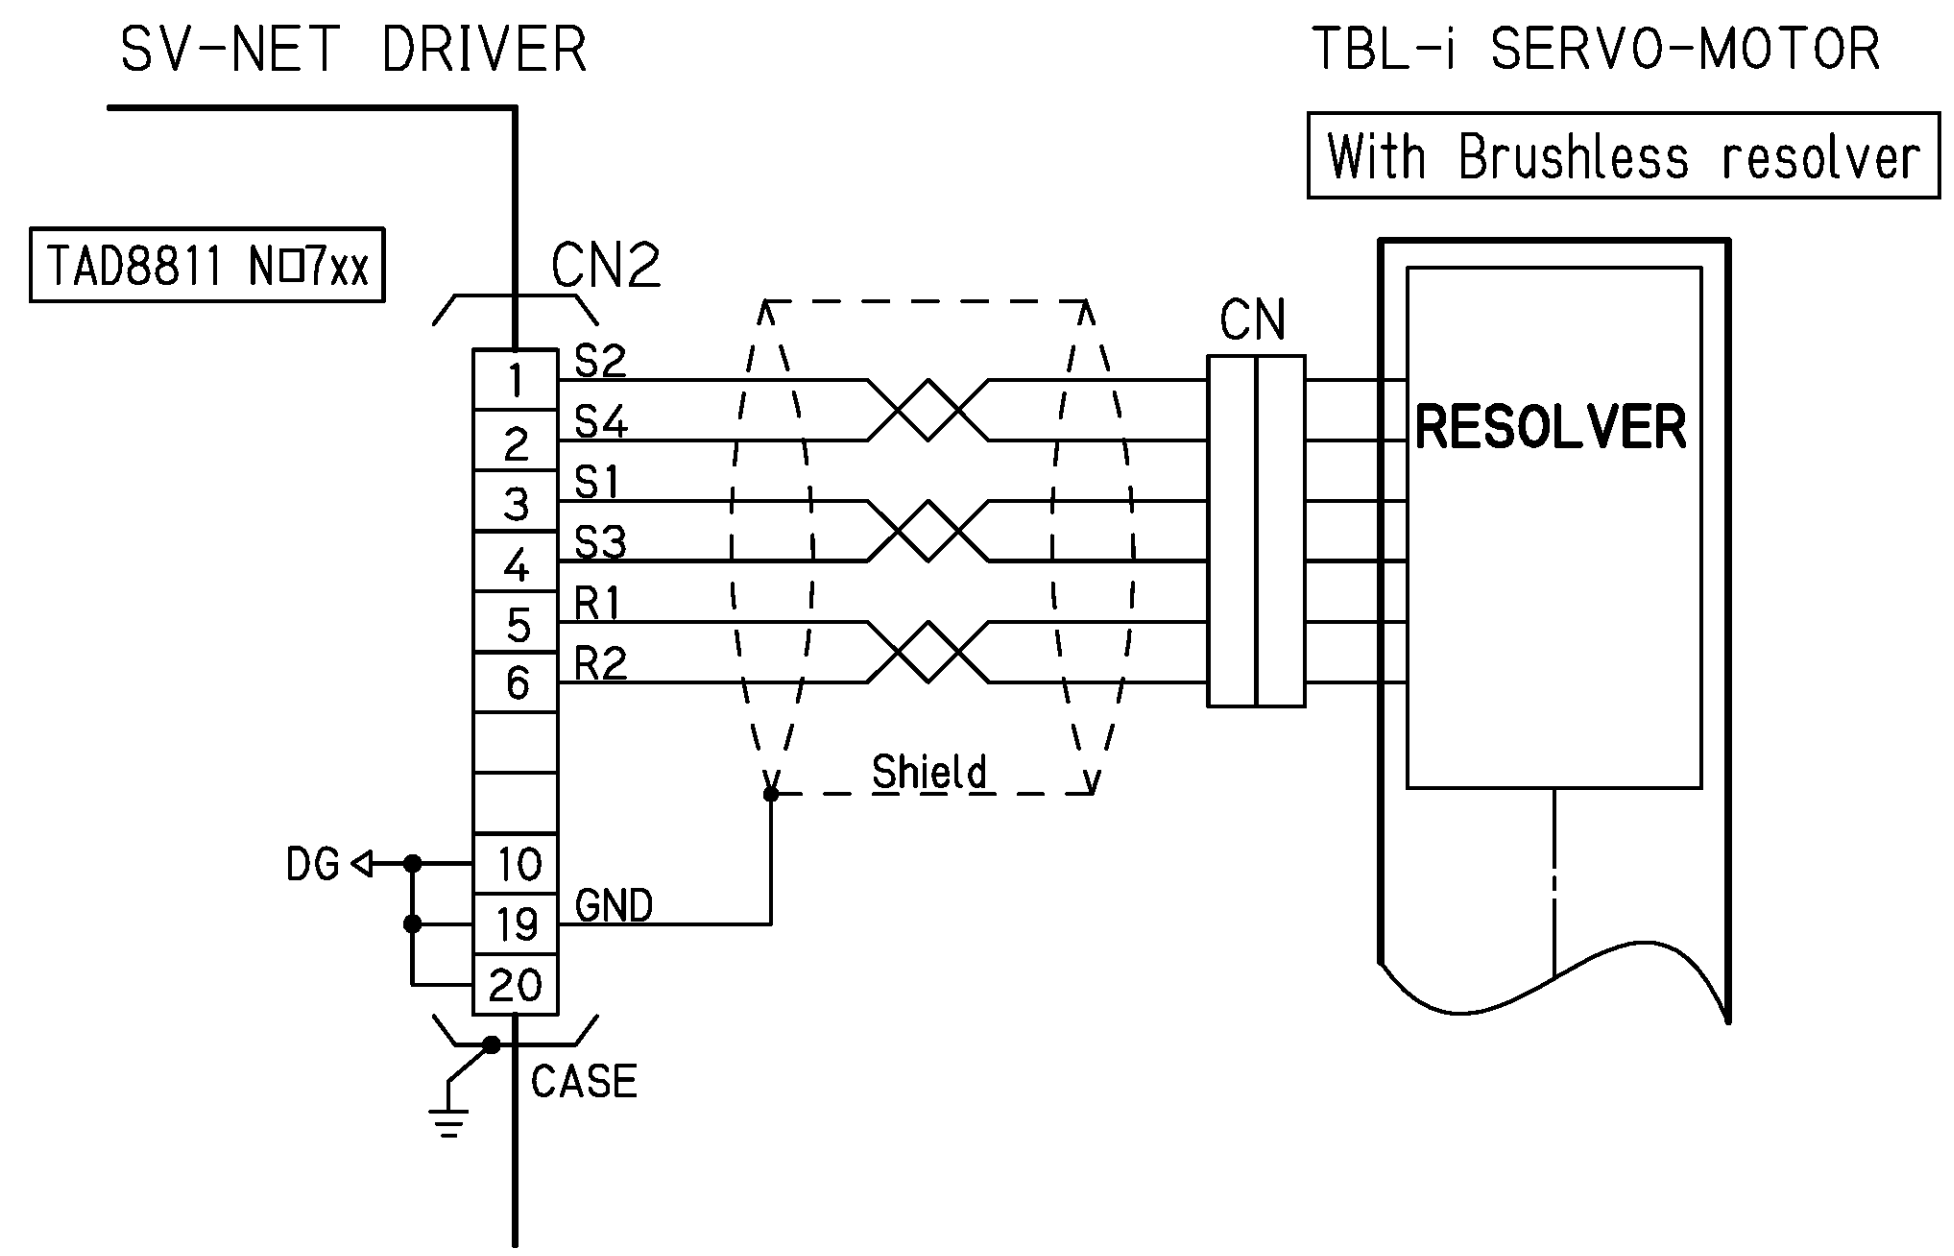

DATE	MODEL NO.	TITLE
13.12.28	TAD8811	外部接続図
SCALE FREE	3RD ANGLE PROJECTION	

DWG NO.		3	4	5	6	7	8	9	10	11	12	SHEET
C	N	D	0	0	0	2	6	1	W	0	0	2/2

JIS A3(297X420) A

TAMAGAWA SEIKI CO.,LTD.